


## 83-621 Testing pushbutton switch

---

- 1 Remove center console (68-200).
- 2 Close connections 5 and 7 on pushbutton switch by means of blind plugs.
- 3 Connect tester to connection 6 of pushbutton switch.
- 4 Push "OFF" button.

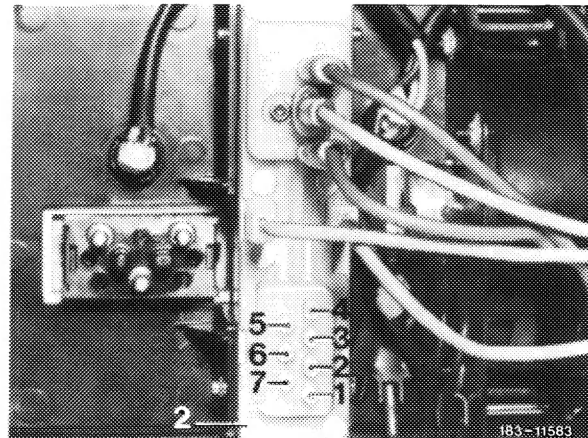

2 Pushbutton switch with vacuum connection 1 to 7

- 5 Close connections 1 and 2 with blind plugs and evacuate pushbutton switch. Readout on gauge should not change. Check connections 1, 2 and 6 for passage. Pull off blind plugs for a short period. Readout on gauge should drop.
- 6 Push button "AUTO-LO" or "AUTO-HI".
- 7 Close connections 2 and 3 and evacuate pushbutton switch. Readout on pressure gauge should not change. Check connections 2, 3 and 6 for passage. Pull off blind plugs for a short moment. Readout on pressure gauge should drop.
- 8 Push "BI-LEVEL" or "DEF" button.
- 9 Close connections 3 and 4 and evacuate pushbutton switch. Readout on pressure gauge should not change. Check connections 3, 4 and 6 for passage. Pull off blind plugs for a short period. Readout on pressure gauge should drop.
- 10 Install center console (68-200).